

INSTALLATION INSTRUCTIONS FOR THE
ROTARY INVERTER. PART NO. 120641.



CONTENTS

	<u>Page</u>
Safety First	2
Description	3
Application	3
Operation	3
Overload Protection	3
Installation	3
Care and Maintenance	4
Specifications	4
Warranty	4

SAFETY FIRST

1. Each operator should fully understand the entire contents of this manual before use.
2. The inverter must only be plugged into the Electric tractor accessory receptacle (36-volts d-c). Use with any other power source may cause the unit to malfunction and could cause a hazardous condition.
3. Never use the inverter if it is wet or in wet areas, to prevent any possibility of electric shock.
4. Never attempt to operate the inverter while the charger is plugged in, to avoid possible shock hazard and damage to equipment.
5. To prevent accidental tractor movement while using the inverter, turn the key switch off and set the parking brake.
6. The inverter should be used with the same caution as any other source of 120-volt a-c power.

