

INSTALLATION INSTRUCTIONS FOR WEIGHT/
UTILITY BOX - EGT 120 AND EGT 150 TRACTORS.

BUNDLE NO. 120-0013.

The Weight/Utility Box provides the owner with a multi-purpose attachment that can be used to carry ballast to increase traction, tools for outdoor repairs, or standard Electric accessories such as the hedge trimmer.

INSTALLATION

NOTE: Observe the location of the threaded hole in each mounting arm before proceeding with the installation. See Figure 1.

Hold the Weight/Utility Box as shown in Figure 2 and enter one mounting arm into its corresponding frame channel to a depth of approximately one-half inch. With the box supported in this fashion the mounting arm on the opposite side can easily be inserted. The box should then be pushed towards the front of the tractor until its front side rests against the rear tractor frame.

Insert one of the screws into each of the threaded holes in the mounting arms from inside the frame. With a wrench, tighten each screw so

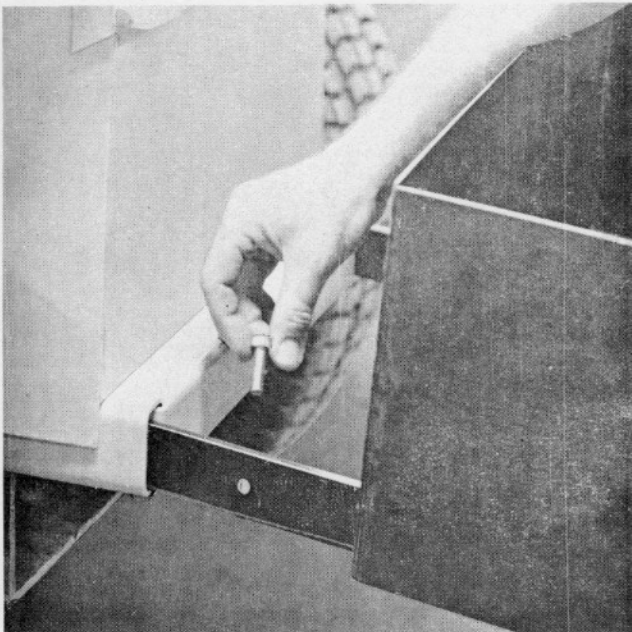


Figure 1

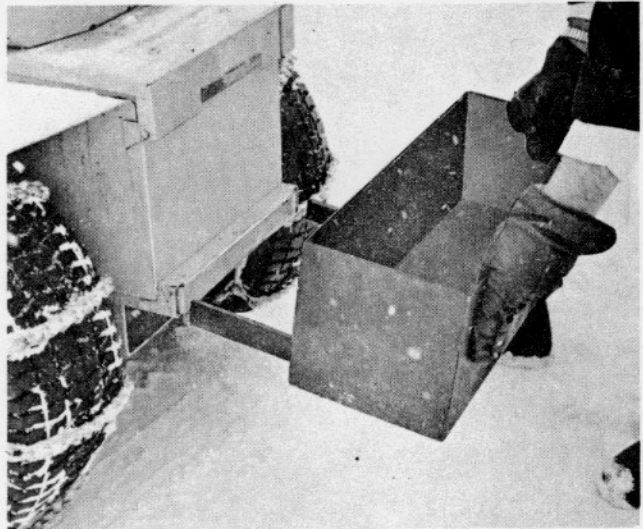


Figure 2

its end firmly butts the inside, but not so as to distort the arm or frame.

With the installation completed, fill the box as follows:

Ballast

The amount of weight necessary for desired traction depends on the attachment being used, the terrain encountered, weight of the operator and the surface condition. Normally 100 to 160 pounds provides excellent results. The following table may be used as a guide to determine amount of material needed. These weight guides apply only if the box is completely filled:

<u>Material</u>	<u>Weight</u>
Steel	435 lbs*
Iron	395 lbs*
Sand (dry)	90 lbs
Masonry Bricks	90 lbs
Earth (dry)	68 lbs

* Total ballast should not exceed 250 pounds. Weights are given to estimate fractions of the total capacities.

