



Elec-Trak[®]

Tractor

INSTRUCTIONS

Supplement to
GEH-3954

DEALER INSTRUCTIONS - MANUAL REAR LIFT AP58

SET-UP

For packaging purposes the manual rear lift handle is disconnected and must be reconnected before installation.

1. Remove the small cotter pin and plain washer from the lower end of the release lever.
2. Remove the lower end of the release lever from the handle assembly. Notice the roller that is held on the release lever by the handle assembly. This will drop out as the lever is removed.
3. Reposition the handle assembly so it is about perpendicular to the mounting arms of the lift.
4. Drop the roller into the gear sector depression closest to the slots in the handle assembly.
5. Align the handle assembly slots with the roller and pass the lower end of the release

lever through the slots and the roller.

6. Secure the lever with a plain washer and cotter pin.

RETAINING PIN INSTALLATION

Mount the lift at the rear of the tractor in the normal fashion making sure it is flush with the tractor frame. Along its forward edge between the mounting arms is a welded bracket which contains a 3/8-inch hole. With the lift handle assembly giving the lowest position, mark the location of the 3/8-inch hole on the tractor frame and remove the lift. Drill a 3/8-inch hole in the frame so it will align with the corresponding hole in the lift bracket.

LUBRICATION

Lubricate all high-friction points with a few drops of 30 weight machine oil. These points include the release-lever roller, release-lever upper spring-end-guide, and each end of the main pivot bar. Wipe off excess oil to prevent dust accumulation.

**General Electric Company
Outdoor Power Equipment Operation
Corporations Park, Bldg. 702
Schenectady, N. Y. 12345**

GENERAL  **ELECTRIC**