





# Electrak<sup>®</sup> Garden Tractor

## INSTALLATION OF "FRONT MOWER GUIDE"

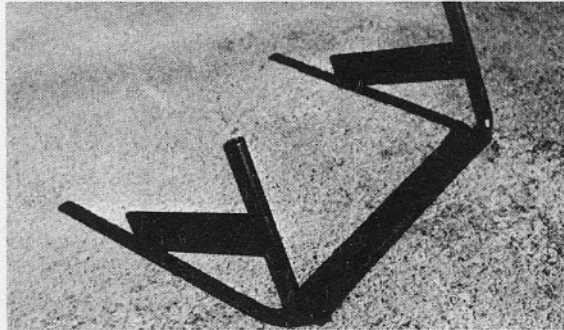


*Keep for Reference*

1. Install "mower guide" on front of tractor with roller nearest the ground. The two rectangular tabs on each side of the "mower guide" are inserted in the two slots on each side of front bumper. The tabs are intended to be spring loaded against the sidewalls of the tractor slots. For ease of assembly, insert one tab approximately 1/2" into slot and push sideways on opposite tab to line up with slot and then push "mower guide" up against bumper.

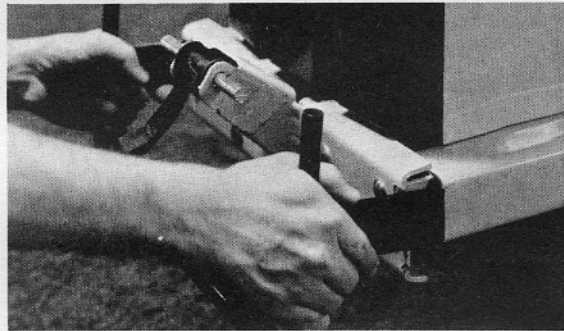

2. Install one clamp on bumper. Loosen nut on top carriage bolt on one side of bumper. Slide the forks of the clamp under the head of the carriage bolt and the curved portion of the clamp over the rod of the bumper guide. Re-tighten the nut on the carriage bolt.

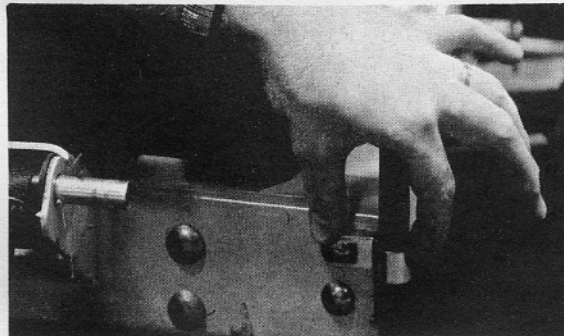

GEH-3952

General Electric Company  
Outdoor Power Equipment Operation  
Corporations Park, Bldg. 702  
Schenectady, N. Y. 12305

GENERAL  ELECTRIC