

GENERAL  ELECTRIC

OUTDOOR
POWER EQUIPMENT
OPERATION

IMPORTANT!

February 27, 1974


TO: ELEC-TRAK TRACTOR DEALERS

SUBJECT: ER8-36 SEAT SWITCH

In order for the seat switch to disengage when the operator leaves the seat, the following must be done:

- 1) The seat must have two factory installed rubber bumpers on the bottom, each placed one inch behind the front bolt hole in line with the rear hole.
- 2) The bolts and washers for mounting the seat must be assembled as shown in the rider instruction book, Page 20, Figure 22.
- 3) The bolts mounting the seat have to be tightened as tight as they can go! This is important - make sure the bolts bottom out.
- 4) After assembly of the seat, get on and off the seat to check that the seat lifts itself clear of the seat switch each time you get off. This function will not always work unless the mounting bolts are fully bottomed.

Sincerely,

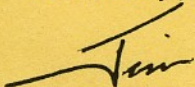

J. W. Stackhouse,
Manager - Product Planning

JWS/lba

