



## INSTRUCTIONS

### 42" ROTARY MOWER MODEL AA42

The AA42R Rotary Mower is supplied with a KR42 Rear Discharge Kit, and the AA42S mower includes the KS42 Side Discharge Kit.

The Rear Discharge Kit is recommended for the homeowner who mows his lawn frequently or intends to use the Elec-Trak sweeper (AS31). A greater degree of safety is afforded the operator and bystanders with this kit since objects that are picked up by the blades are discharged under and behind the tractor.

The Side Discharge Kit is designed for those homeowners who mow their lawns less frequently without picking up the grass clippings. The side discharge arrangement disperses the clippings over a wider area.

**WARNING:** Side discharge mowers should not be used near bystanders or buildings where a thrown object could cause injury.

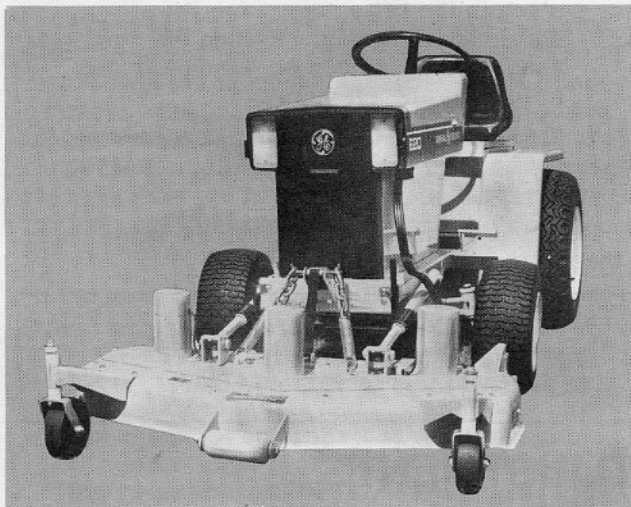


Figure 1

In either configuration, the mower is mounted directly to the Elec-Trak tractor without the need of additional equipment. (See Figure 1.)

## INSTALLATION

### FRONT MOWER GUIDE

The front mower guide eliminates any side motion of the mower arms. This improves stability and control in trimming around trees and shrubs. It also provides a bearing for the mower housing when raised for transportation or for mowing high grass.

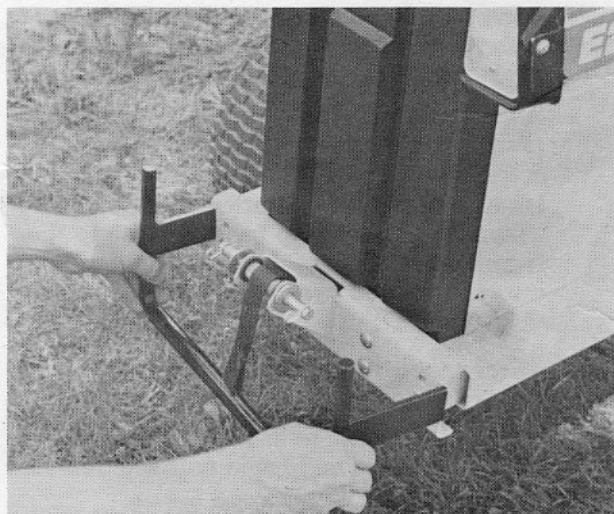


Figure 2

The front mower guide is installed on the front of the tractor with its roller nearest the ground. The two rectangular tabs on each side of the mower guide are inserted in the frame slots on each side of the bumper. (See Fig. 2.) For ease of assembly, insert one tab approximately 1/2-inch into a slot and push sideways on the opposite tab to line it up with the other slot. Then, push the mower guide in against the bumper.

Remove the upper right carriage bolt from the bumper and pass it through one of the clamps supplied so when the bolt is reinstalled, the clamp holds the mower guide in place. Install another clamp on the upper left bumper carriage bolt in the same way. (See Figure 3.)

